


TRUCK PROTECTOR FLAP INSTALLATION INSTRUCTIONS

February 14, 2000

Lit. No. P2178

1. Using the truck protector support bars as templates, mark and drill six 13/32" holes in support frame as shown.
2. Align the truck protector flap and bars with the holes and attach using six 3/8"-16 x 3/4" cap screws and locknuts.

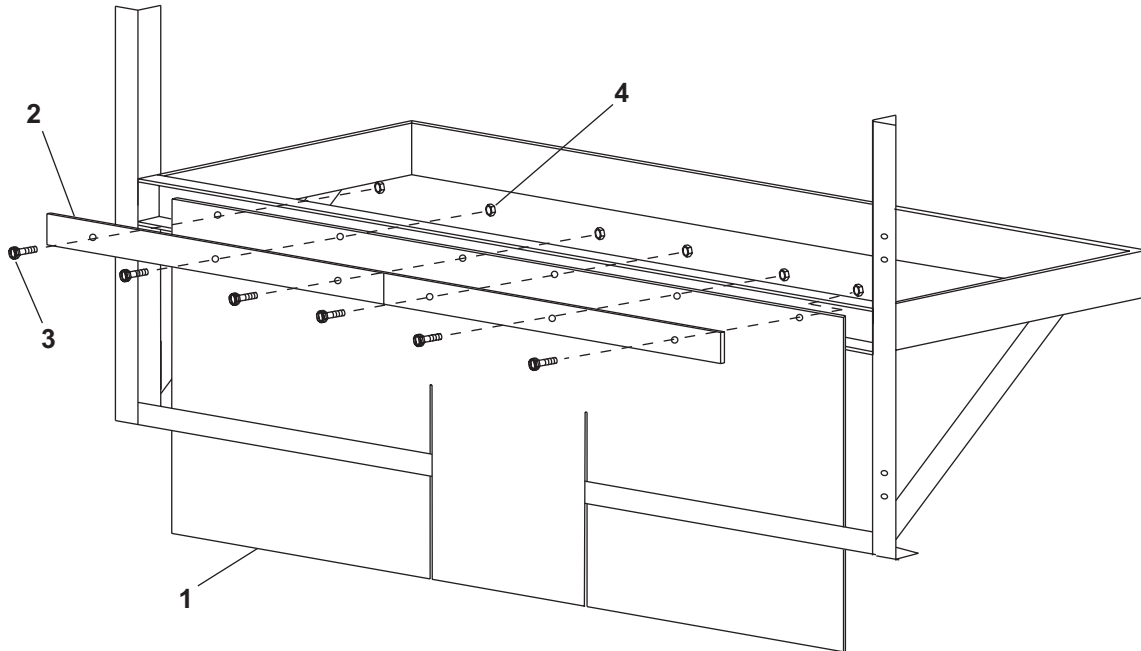

Truck Protector Kit - 67443

Item	Part	Qty	Description	Item	Part	Qty	Description
1	P2097	1	Truck Protector Flap	NS	94519	1	Bolt Bag
2	P2096	2	Truck Protector Support Bars				

NS = Not Shown

Truck Protector Bolt Bag - 94519

Item	Part	Qty	Description	Item	Part	Qty	Description
3	M2002*	6	3/8"-16 x 3/4" Cap Screw	4	M2005*	6	3/8"-16 Locknut

* available as a service parts kit only (5 pieces per package)

Copyright© 2000 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied in whole or in part, in any printed mechanical, electronic, film or other distribution and storage media, without written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used herein.