


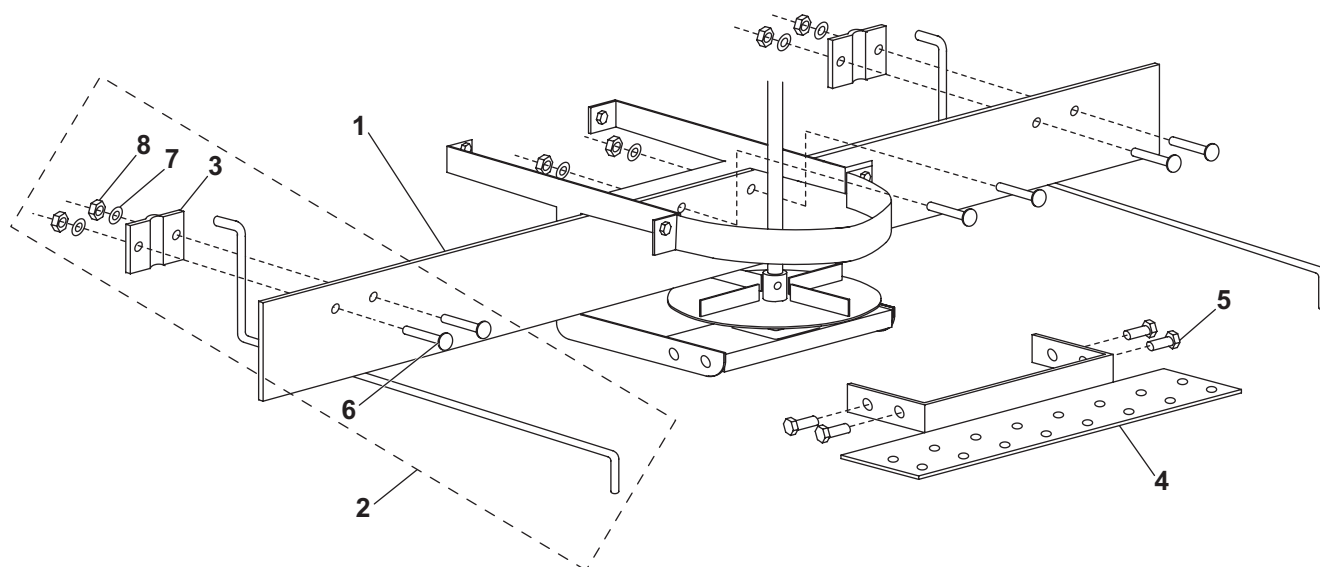


Low Pro Deflector Kit Parts List

Item	Part	Qty	Description	Item	Part	Qty	Description
1	95402	1	Deflector	6	90556	6	5/16-18 x 1 Carriage Bolt
2	95279	2	Adjustment Rod Kit	7	91263	6	5/16 External Lock Washer
3	68734	2	Rod Clamp	8	91430	6	5/16-18 Hex Nut
4	P2740	1	Deflector Bracket	Not Shown	68735	1	Drill Template
5	M2071-1*	4	3/8-16 x 1-1/4 Hex Cap Screw Stainless				

* Available as a service parts package only (5 pieces per package).

INSTALLATION INSTRUCTIONS

1. Attach an adjustment rod to each end of the plastic deflector using one rod clamp, two 5/16-18 x 1" carriage bolts, two 5/16" external lock washers and two 5/16-18 hex nuts per rod.
2. Remove the original deflector from the spreader by removing three 3/8" cap screws. Reinstall one into the hoop and retighten.
3. Tip the unit forward so work can be performed on the rear of the unit.
4. Place the supplied template in the frame channel with the holes toward the bottom.
5. Center punch these holes and drill with an 11/32" drill.
6. Install the new deflector with two 5/16-18 x 1" carriage bolts, two 5/16" external lock washers and two 5/16-18 hex nuts.
7. Remove the four 3/8-16 x 3/4" cap screws that fasten the bottom bearing plate to the unit.
8. Install the adjustable deflector bracket to outside of the bottom bearing plate using the four 3/8-16 x 1-1/4" stainless cap screws **supplied with the kit** and the locknuts removed in Step 7. Realign the bottom bearing plate before tightening the cap screws. The spinner must rotate freely and the auger must not strike any part of the hopper throat.

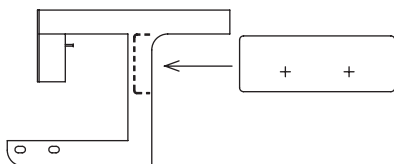


- over -

ADJUSTING THE DEFLECTOR


WARNING

Turn spreader off before filling, adjusting or cleaning.


The spread pattern is dependent on the spinner speed and deflector position.

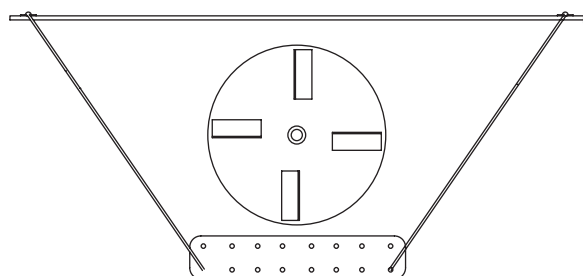


Wide Spread Pattern

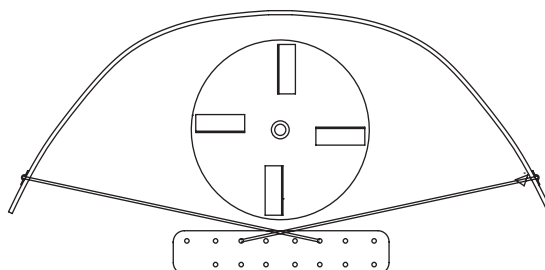

Narrow Spread Pattern

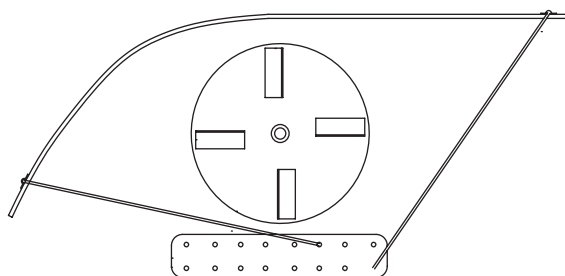

Passenger Side Spread Pattern

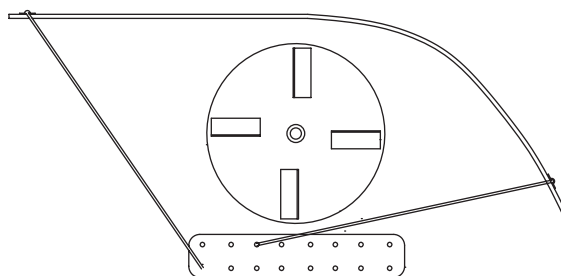

Driver Side Spread Pattern

Copyright © 2004 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or spreader owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Do not exceed vehicle ratings with a spreader. The company offers a limited warranty for all spreaders. See separately printed page for this important information.